

USE & MAINTENANCE SC6500

ATTENTION! Do not use the machine before you have read and understood the User Manual



1. Check the battery charge gauge (and if necessary re-charge)



2. Check that the drive pedal is responding and all circuit breakers are armed



3. Check battery cables are well connected together



4. Recovery tank seal cover must correctly installed and in good condition



5. Inspect the squeegee blades for cuts or chunks



6. Install squeegee

- 7. Check the height of the squeegee by
adjusting the castor wheels and the
angle knob.8. Open broom door compartment and
check presence of ropes or debris
that can block it.9. Check presence of water in the
solution tank.
- 10. If necessary open the solution filter cage and clean the net.



11. Install Brushes.



12. Adjust side skirts height



13. Make sure that deck and squeegee 14. Adjust water flow. are moving down when pressing the button.



v. 15. Adjust detergent flow.



16. In case something does not work enter the Service test mode by pressing the Speed switch and the traction control switch, then on the key. Go through the menu.

If the machine has been used until the Red light illuminates on the battery level indicator on the machine, a full recharge of the batteries (10-12 hours) will be required. Failure to carry out this this procedure may cause damage to the batteries. Charging the batteries after every use is recommended.

PLEASE ENSURE RED SOCKET IS LEFT DISCONNECTED AFTER RECHARGE IF THE MACHINE IS NOT TO BE USED ON A DAILY BASIS

Nilfisk-Advance A/S Sognevej 25 DK-2605 Brøndby Denmark Tel.: +45 43 23 81 00 Fax: +45 43 43 77 00 mail.com@nilfisk-advance.com www.nilfisk.com





TROUBLESHOOTING

SC6500 "

ATTENTION! Do not use the machine before you have read and understood the User Manual

The machine doesn't work as it should?



1 Check battery charge gauge.




2 Check that the drive pedal is responding and all circuit breakers are armed.



3 Check battery cables are well connected together.



Recovery tank seal cover must 4 correctly installed and in good condition.

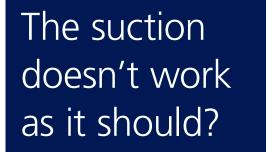






- **1** Check if the suction hose is correctly installed and cleaned.
- **2** Open the recovery tank and check if the vacuum grid and gasket are cleaned.
- **3** Check if squeegee blades are damaged or dirty.
- 4 Close the recovery tank cover properly and/or verify the gasket wear.

The machine doesn't clean as it should?

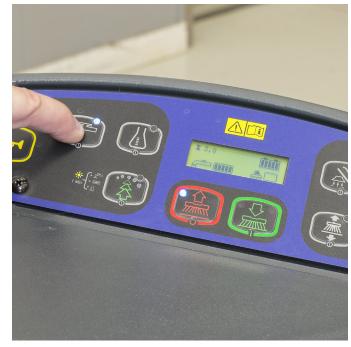

1 Check if you have the right water settings.

2 Check if the solution tap is open.



3 Check if the solution filter is cleaned.

The brush don't work as they should?



1 Check if the brush are correctly installed and not worn out.



2 Check if there isn't any brush motor 3 overload i.e. 3 battery Ledsflash simultaneously.



Check if there are external materials avoiding brush rotating.

Nilfisk-Advance A/S Sognevej 25 DK-2605 Brøndby Denmark

Tel.: +45 43 23 81 00 Fax: +45 43 43 77 00 mail.com@nilfisk-advance.com www.nilfisk.com

